Additional Wall Switch Kit
Wall Switch with Wall-Mount Control

User's Manual

For technical support, call us at:
1-800-654-8483, option #4

51139-2 10/09

Enclosed you will find
- (1) Wall Mount Control
- 2-Sided Tape / Screws
- (1) Wall Switch
- Wiring Device Screws and Wire Nuts (bagged)

The GE advantage
Any transmitter in the GE product line is capable of controlling every receiver – the ultimate in home convenience. Control any number of light fixtures or appliances from up to 150ft.* away by choosing the transmitter and receiver combination that best suits your needs.

⚠ WARNING

Risk of electric shock	Risk of fire
• Turn power off before inspection, installation or removal • Use indoors only • Do not use in wet locations	• Do not use to control fluorescent lighting fixtures, motor-operated appliances or transformer-supplied appliances • Do not exceed electrical ratings. • Use copper wire only with this device

The following GE transmitters (sold separately) can control your receiver:

Key Chain Remote
RF100TXPS

Wall Mount Control
RF102TXPS

Whole-Home Control
RF200KINPS

Motion-Sensing Control
RF613TX

The transmitters above can also control the following GE receivers (sold separately):

Indoor Outlet
RF100RXPS

Outdoor Outlet
RF106RXPS

Socket Adapter
RF104RXPS

Wall Switch
RF102RXPS

IMPORTANT! These devices are NOT compatible with devices from other systems. You must purchase GE transmitters and receivers to ensure compatibility.

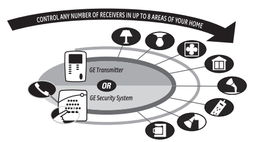

GE is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114
www.jascoproducts.com

Expanding your system
These devices operate on any of 8 user-settable channels. The channels are easy to set / adjust – with the simple turn of a knob. The following table is just one example of how you can configure your system:

Area	CH	Transmitters	Receivers
Bedroom	1	Bedside - Wall Mount Control Entrance - Wall Mount Control	(2) Bedside Lamps - (2) Socket Adapters Corner Torchiere - Indoor Outlet Adapter Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter
Living Room	2	Coffee Table - Timer/Controller Entrance - Wall Mount Control	(2) End Table Lamps - (2) Socket Adapters Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter Christmas Tree - Indoor Outlet Adapter
	3		Window Santa - Indoor Outlet Adapter Lighted Poinsettia - Indoor Outlet Adapter
Basement	4	Entrance - Wall Mount Control	(4) Overhead Can Fixtures - (4) Socket Adapters (2) Fluorescent Fixtures - (2) Indoor Outlet Adapters
Garage	5	Entrance - Wall Mount Control	(2) Fluorescent Fixtures - (2) Outdoor Outlet Adapters Overhead Light Fixture - Wall Switch
Outdoor	6	Foyer - Wall Mount Control Car Keys - Key Chain Remote	Entry Light - Wall Switch Coach Lantern - Wall Switch
	7		Christmas Lights - Outdoor Outlet Adapter Yard Santa - Outdoor Outlet Adapter
Kitchen	8	Entrance - Wall Mount Control	Coffee Maker - Indoor Outlet Adapter

Operating Instructions - Wall Switch

FOR INDOOR USE ONLY

1. Find the slot labeled HOUSE CODE on the front of the unit..
2. Set the HOUSE CODE to any one of the following settings:





NOTE: Make sure ALL your GE devices have the same HOUSE CODE setting. The transmitters WILL NOT control the receivers if they have different HOUSE CODE settings.

IMPORTANT! HOUSE CODES help eliminate interference (devices randomly turn on / off). If you experience interference, change the HOUSE CODE on all your transmitters and receivers to a different setting.

3. Set the CHANNEL by using the knob on front as shown.

NOTE: If you set your Wall Switch to CHANNEL 1, the unit can be controlled using any transmitter set to CHANNEL 1. If you set your Wall Switch to CHANNEL 2, the unit can be controlled using any transmitter set to CHANNEL 2 ... and so on.

IMPORTANT! A transmitter will control a receiver ONLY if they have the same HOUSE CODE and CHANNEL settings.

WARNING: Turn off power first by removing the fuse or switching the circuit breaker to OFF. This product requires some knowledge of electrical wiring and must be installed in accordance with the National Electrical Code (NEC) and local codes.

4. Remove the wall plate and existing wall switch.
5. Connect the Wall Switch wires to the electrical box wires using the following diagram as a guide.



** Reflects standard color coding. Color coding in your home may vary.* *** Either one of the two*

Make sure you twist the strands of each lead tightly together and protect the connections by screwing wire nuts clockwise over the ends. Secure each wire nut with electrical tape.

6. Carefully push the wiring into the electrical box, mount the Wall Switch and replace the existing wall plate.

NOTE: Metallic wall plates may degrade operating range.

7. Restore power.
8. Slide the control switch beneath the toggle to ON (OFF) to enable (disable) the unit.

DO NOT USE TO CONTROL FLUORESCENT LIGHTING FIXTURES, MOTOR-OPERATED APPLIANCES OR TRANSFORMER-SUPPLIED APPLIANCES

Operating Instructions - Wall Mount Control

1. Find the slot labeled HOUSE CODE on the back of the unit.
2. Set the HOUSE CODE to any one of the following settings:



3. Set the CHANNEL by using the knob on front as shown.

NOTE: If you set your Wall Mount Control to CHANNEL 1, the unit can control any receiver set to CHANNEL 1. If you set your Wall Mount Control to CHANNEL 2, the unit can control any receiver set to CHANNEL 2 ... and so on.

4. Mounting

NOTE: Mounting the Wall Mount Control on masonry or metal walls may degrade the functional range. Position with side marked "INSTALL THIS SIDE UP" on top.

Tape Mounting
A. Make sure surfaces are free of dust, oil and other substances that could affect adhesion.
B. Attach the double-sided tape to back of the Wall Mount Control housing.
C. Press the tape firmly to the mounting surface.

Screw Mounting
A. Using a slotted screwdriver, remove the faceplate of the Wall Mount Control.
B. Place the detached back plate where desired and mark screw locations.
C. Insert the mounting screws into the back plate holes and screw into place.
D. Replace the Wall Mount Control faceplate.

5. Use the toggle button to activate the Wall Mount Control (ON/OFF operation). Make sure to press firmly and for a minimum of 1 second for best results. An indicator lights RED when a signal is sent.
6. Using any of the receivers set to the same CHANNEL and HOUSE CODE, test the installation by using the ON and OFF buttons.

Specifications

Wall Mount Control

Battery Type ..... Use ONLY A23 (12V) Alkaline

NOTE: The functional range will decrease as the battery wears out so make sure to replace the battery every 6 months for best results.

Wall Switch

FOR INDOOR USE ONLY - DO NOT EXCEED ELECTRICAL RATINGS

Electrical Rating ..... 120 V, 60 Hz
Maximum Tungsten Load ..... 360 W Incandescent Only
Maximum Motor Load ..... 1/3 HP

*Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery and obstructions between the transmitter and receiver.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and;
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Note: the manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

90 DAY LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of 90 days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company, 10 E. Memorial Rd., Oklahoma City, OK 73114